


LG Aria Digital Key Telephone

8 Button Quick Reference User Guide (LDP-7008)

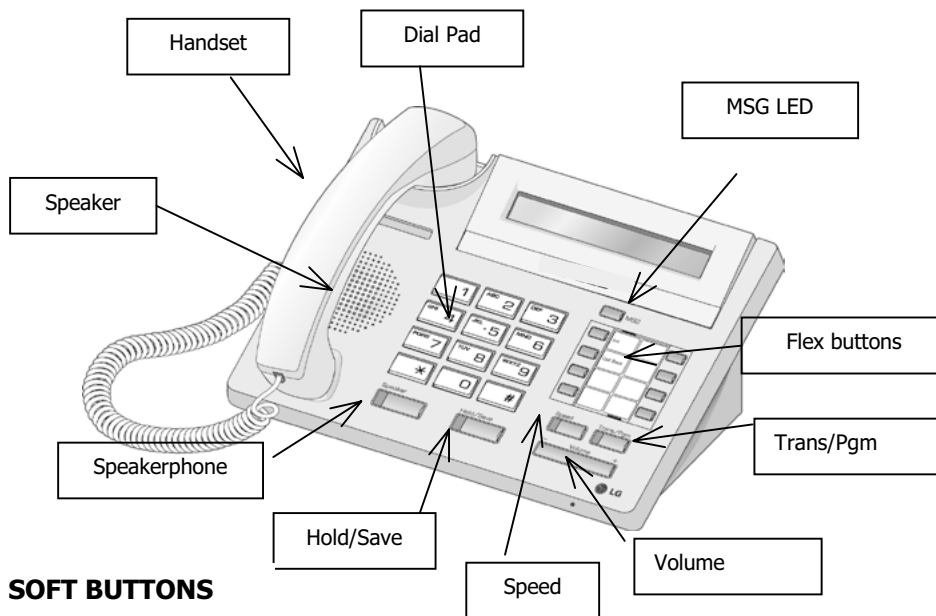

FIXED FEATURE / SOFT BUTTONS

- **SPEED** button provides you with access to speed dialing, save number redial and last number redial.
- **TRANS/PGM** (TRANSFER) button is used to transfer an outside call from a station to another.
- **CALLBK** (CALLBACK) button allows you to leave a callback indication at a station that is busy, unattended, or in Do Not Disturb.
- **DND/FWD** (Do Not Disturb/Forward) button allows you to forward your calls to another destination, or make DND mode.
- **VOLUME** bar allows you to adjust speakerphone and handset volume.
- **SPEAKER** button enables you to make a phone call without lifting handset. It turns the telephone on and off when using the speakerphone.
- **HOLD** button enables you to place an outside caller on hold.
- **PROGRAM FLEXIBLE BUTTONS** Press "TRANS/PGM", press programmable flexible button, Dial "extension number or number below", press "HOLD/SAVE", press programmable flexible button
 - To Program CONF button "91"
 - To Program CALL BACK button "92"
 - To Program REDIAL button "97"
 - To Program DND/FWD button "93"
 - To Program MUTE button "95"

| FEATURES | |
|--------------------------------|---|
| MAKE AN INTERNAL CALL | Dial the extension number Ie. "102" |
| SELECT A LINE | Dial "0" |
| DIAL THE ATTENDANT | Dial "9" |
| TRANSFER A CALL | "TRANS/PGM" Ext.No. Hang-up or wait for an answer then hang-up. Or press the DSS button Hang-up (DSS=direct station selection) |
| CALL PARKING | Dial "TRANS/PGM" 601-619 (RETRIEVE CALL: dial 601-619) Note: Most features can be accessed via the menu. Press "TRANS/PGM" scroll up & down by the volume keys. Make your selection by pressing the relevant digits |
| BGM (Back Ground Music) | "TRANS/PGM" 73 (channel 01-12, 00 to cancel) "Hold/Save" |
| CALL BACK | "CALLBACK" (call-back a busy or no answer extension.) |
| CALL FORWARD | Dial 554 1=fwd all,2=busy,3=no ans,4=busy/no ans,5=off-net, 6= off-net no ans, 0=follow me (add # for VMIB) |
| CANCEL FORWARD | 554 # |
| CHANGE INTERCOM MODE | "TRANS/PGM" "12" 1=Hands free, 2=Tone ring, 3=Private mode SAVE |
| CHANGE RING TONE | "TRANS/PGM" "11" 1-4 HOLD/SAVE. |
| HEADSET MODE | "TRANS/PGM" "75" 1:Speaker 0:Headset "HOLD/SAVE" |
| PAGEALL | #00 INTERNAL: dial #5 EXTERNAL: dial #9 |
| PICKUP | ** Direct Pickup: *7 Ext.No |
| PROGRAM DSS KEYS | "TRANS/PGM" DSS (flex buttons) dial code or Ext.no. "HOLD/SAVE" |
| LAST NUMBER REDIAL | Press "SPEED" "*" |